

FOR A GOOD REASON

GRUNDIG

BODYGROOMER

MT 6030 Wet & Dry

ENGLISH



SAFETY

Please note the following instructions when using the appliance:

- The appliance is designed for domestic use only.
- This appliance is designed solely for trimming body hair below the neck line. Any other use is expressly prohibited.
- Do not operate the appliance unless you use it for body shaving.
- After charging, pull out the power adapter from the wall socket.
- Caution! Always keep the power adapter dry.
- Never use the appliance if it, the shaving head or the power adapter show any signs of damage.
- Never use the power adapter with damp or wet hands.
- The appliance may only come into contact with water once it is disconnected from the power adapter and the power adapter is no longer in the socket.
- To avoid damaging the power cord, prevent it from being squashed, bent or from rubbing on sharp edges. Keep the power cord away from hot surfaces and open flames.
- Never place the appliance, accessories, power adapter on or near hot surfaces.
- Check if the mains voltage on the rating label corresponds to your local mains supply.
- Do not drop the appliance.
- Use the appliance with delivered parts and power adapter only.
- Keep the appliance out of the reach of children.
- The appliance may not be used by the following people, including children: those with limited physical, sensory or mental capabilities or those with a lack of experience and knowledge. This does not apply to the latter if they were instructed in the use of the appliance or if they use it under the supervision of a person responsible for their safety. Children should always be supervised to ensure that they do not play with the appliance.
- Do not open the appliance under any circumstances. No warranty claims are accepted for damage caused by improper handling.

OVERVIEW

Dear Customer,

Congratulations on the purchase of your MT 6030 body groomer.

Please read the following user notes carefully to ensure you can enjoy your quality GRUNDIG product for many years to come.

A responsible approach!



GRUNDIG focusses on contractually agreed social working conditions with fair wages for both internal employees

and suppliers. We also attach great importance to the efficient use of raw materials with continuous waste reduction of several tonnes of plastic every year. Furthermore, all our accessories are available for at least 5 years. For a future worth living. For a good reason. Grundig.

Special features

Your body groomer is designed to shave the body hair below the neck line, both wet or dry.

- 3 combs allow you to shave in 3 mm, 6 mm or 10 mm lengths
- The shaving head rotates in a 20° angle
- 100 % waterproof
- Antibacterial titanium foil protects your skin from irritation

Controls

See the illustrations on page 2.

- A** Cutting head, titanium foil with two long hair trimmers
- B** On/Off switch
- C** Charge indicator LED
- D** Charging stand

Accessories

- E** Power adapter
- F** Charging plug
- G** Trimming comb 3 mm
- H** Trimming comb 6 mm
- I** Trimming comb 10 mm
- J** Cleaning brush

POWER SUPPLY

Charging

The power adapter has an automatic 100 - 240 V~, 50/60 Hz transformer which works anywhere in the world. This allows it to adjust to all international AC voltages. Only use the power adapter supplied for charging.

- 1 Insert the charging plug **F** into the socket at the back of the charging stand **D**.

Note

- The groove on the charging plug **F** must match with the notch in the charging stand **D** socket.
- 2 Plug the power adapter **E** into the wall socket. Place the appliance in the charging stand **D**.
 - Charge indicator LED **C** lights up blue.
 - When the appliance is fully charged, the charge indicator LED **C** disappears.
 - 3 Pull the power adapter **E** out of the wall socket.
 - 4 Remove the appliance from the charging stand **D**.

Notes:

- Before first use or if you have not used the appliance for a long time, charge up the batteries completely (about 14 hours). The charging time afterwards is approximately 8 hours.
- This appliance is designed to charge and operate perfectly between 15°C and 40°C.
- If you switch on the appliance while it is charging, charging will be interrupted.
- When fully charged, the appliance works for around 50 minutes. It is not advisable to charge the batteries after each use. Generally, you should only charge the batteries when they are completely discharged. This increases their service life.

OPERATION

Notes

- When you first start to use the appliance, leave yourself enough time to practice. Sensitive areas of your body need some time to get accustomed to shaving.
- The appliance is designed to shave hair below the neckline. Especially for arms and armpits, chest and abdomen, shoulders and back, intimate area. Do not use it to shave your face or head hair.
- The appliance can be used for wet or dry hair.
- For hair longer than 10 mm, use the trimming function before shaving.

Shaving

- 1 If one of the trimming combs **G**, **H** or **I** is attached to the appliance, pull gently to remove it.
- 2 Press the On/Off switch **B** to switch on the appliance.
 - The appliance starts.

- 3 Place the shaving head **A** on your skin.
- 4 Move the shaving head **A** against the direction of hair growth. Apply only a slight pressure when shaving with slow, gentle movements. Make sure that your skin fully contacts with the shaving head **A**.
- 5 After use, switch off the appliance with the On/Off switch **B**.

Trimming

Notes:

- The trimming combs cut the hair in 3 different lengths which are 3 mm, 6 mm and 10 mm.
 - If your hair is wet, you can use a little shaving foam.
- 1 Place one of the trimming combs **G**, **H** or **I** on the shaving head **A**. Make sure that the trimming comb is positioned properly, so that the small notches on the shaving head **A** match the small holes on the trimming comb.
 - 2 Press the On/Off switch **B** to switch on the appliance.
 - The appliance starts.
 - 3 Place the shaving head **A** on your skin.

OPERATION

- 4 Move the shaving head **A** against the direction of hair growth. Apply only a slight pressure when shaving with slow, gentle movements. Make sure that your skin fully contacts with the shaving head **A**.
- 5 After use, switch off the appliance with the On/Off switch **B**.

Useful tips

- Always pull the skin taut when shaving difficult areas.
- Always cut against the natural direction of hair growth.
- In the case of thick or copious hair growth which cannot be removed by just one shave, do one quick shave and then a more thorough second one.

CLEANING AND CARE

General information

The appliance must be cleaned regularly so that you can continue to enjoy its top performance and optimum results. Clean the appliance with a soft cloth and a mild detergent. Do not use any cleaning agents.

Cleaning

- 1 Press the On/Off switch **B** to switch off the appliance.

Caution

- The appliance must be disconnected from the power adapter.
- 2 Remove the trimming combs **G**, **H** or **I** if any of them is attached to the appliance, pull gently to remove it.
 - 3 Remove the shaving foil from the shaving head **A**.
 - 4 Use the cleaning brush **J** to remove the hair from the shaving head **A**, shaving foil and trimming combs **G**, **H** and **I**.
 - 5 Snap the shaving foil into place on the shaving head **A**.
 - 6 Rinse out the shaving head **A** under running water.



- 7 Gently shake out the remaining moisture and then dry off the appliance with a clean cloth.

Note

- Put a drop of machine oil onto the shaving foil in every 6 months.

Caution

- Replace a damaged or worn shaving foil immediately to prevent injury.
- The foil can be irreparably damaged during cleaning. Only press very gently.
- To ensure smooth operation, the shaving foil must be placed exactly in the shaving head. Never take the shaving foils out of their frame.

INFORMATION

Storage

If you do not plan to use the appliance for a long period of time, please store it carefully.

Make sure that it is unplugged and is completely dry.

Store the appliance in a cool, dry place.

Make sure the appliance is kept out of the reach of children.

Environmental note

This product has been manufactured with high-quality parts and materials which can be reused and are suitable for recycling.

This device uses wet & dry technology which protects the inner electrical parts and battery from fluids.

Therefore the battery cannot be removed, this is done at the end of life of the device by our recycling partner.

Do not dispose the product with normal domestic waste at the end of its service life. Take it to a collection point for the recycling of electrical and electronic equipment. This is indicated by this symbol on the product, in the operating manual and on the packaging.



Please consult your local authorities to find out where the nearest collection point is.

Help protect the environment by recycling used products.

Technical data

 This product conforms to the European directives 2004/108/EC, 2006/95/EC and 2009/125/EC.

Power adapter:

Input: 100 - 240 V~, 50/60 Hz

Output: 3.2 V DC 120mA

Batteries: Nickel metal hydride
Ni-MH



Waterproof (IPX7)

Design and specifications subject to change without notice.

www.grundig.com
72011 907 0000